

3.0 Central Console Assembly SOP

Technical Guideline

Video Link

1min



STEP 1

Connect the CCU's terminal



STEP 2

Insert the central control wire into the hole

Tools

Part

CAUTION

2min



Tools

Phillips Screwdriver

Part

CAUTION

STEP 3

Use a Phillips screwdriver to lock the 4 screws that are fixed in the central control, and then plug the wire under the center control.

STEP 4

Cover the protective cover

2min



Tools

T10

Part

CAUTION

STEP 5

Lock the top and bottom screws with T10

STEP 6


Lock the three screws on the left and right with T10

20s



STEP 7

Paste the left sticker

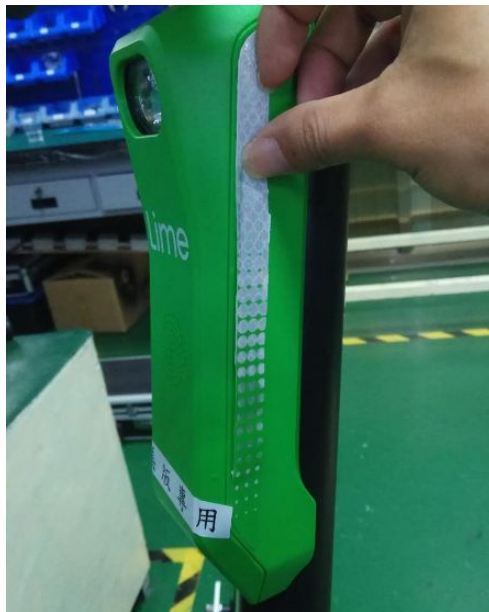

STEP 8

Paste the right sticker

Tools

Part

CAUTION